

84 DTHERS

#GENERAL_
HOISTWAY- THE HOISTWAY MUST BE IN ACCORDANCE WITH SAFETY CODE FOR ELEVATURS (ASME A17.1 DR 344-2000) AND ALL STATE/PROVINCIAL AND LOCAL CODES.

PULIUB HIJSTYAY- DIE TO CLOSE RUNNING CLEARANCES DWNER/AGENT MUST ENURE THAT HIJSTWAY AND PIT (WHERE PROVIDED) ARE LEVEL, PLUMB AND SQUARE AND ARE IN ACCORDANCE WITH THE DIMENSIONS ON THESE DRAWINGS.

<u>MINIMUM OVERHEAD CLEARANCE</u> OWNER/AGENT MUST ENSURE MINIMUM OVERHEAD CLEARANCE IS IN COMPLIANCE WITH CODES.

CONSTRUCTION SITE— DWNER/AGENT TO PROVIDE ALL MASDINRY, CARPENTRY AND DRYVALL WORK AS REQUIRED AND SHALL PATCH AN AMEDIAN COLOUDING FINISH PAINTING) ALL AREAS WHERE WALLS/FLODRS MAY REQUIRE TO BE CUT, DRILLED OR ALTERED IN ANY WAY TO PERMIT THE PROPER INSTALLATION OF THE LIFT. ¥

<u>DIMENSIONS</u>

DISCREPANCIES TO DIR OFFICE IMMEDIATELY.

₽N

ELODR/SUPPORT_MALL_LIDADS— STRUCTURAL ENGINEER TO ASSURE THAT BUILDING AND SHAFT WILL SAFELY SUPPORT ALL LLADS IMPOSED BY THE LIFT EQUIPMENT, REFER TO THE TABLES ON THIS DRAWING FOR LOADS IMPOSED BY THE EQUIPMENT.

<u>DODRS</u>_ SUITABLE LINTELS MUST BE PROVIDED BY OWNER/AGENT.
DOIDR FRAMES ARE NOT DESIGNED TO SUPPORT OVERHEAD WALL
LOADS.

LICATION / ACCESS— MACHINE RIDM LICATED AT THE LICVEST LEVEL ADJACENT TO HOISTVAY, UNLESS SHOWN OTHERVISE ON THE LAYDUT DRAVINGS. FIELD ADJUSTMENT BY INSTALLER MAY BE NCCESSARY TO MET JUB SITE CONDITIONS OR REGULATIONS. ACCES TO MACHINE ROOM TO BE THROUGH A SELF CLOSING AND SELF ACCESS

<u>SLEEVES FOR OIL & ELECTRIC LINES-</u> PROVIDED BY OTHERS, FROM MACHINE ROOM TO HOISTVAY. (POSITION PER INSTALLERS INSTRUCTIONS).

IGHTS		! INFO	
115/1PH	230/1PH/60HTZ	INFO 208/3PH/60HTZ	(V/PH/CYCLE) SIZE (AMPS)
	60	30	-
15	50	30	TIME DELAY FUSE (AMPS)
	21	15.6	DELAY FULL LDAD : (AMPS) CURRENT (AMPS)

POWER SUPPLY- (SEE SPECIFICATIONS) LOCABLE FUSED DISCONNECT VITH AUXILLARY CONTACT TO BRAKE THE BATTERY FEED. BR CIRCUIT BREAKERS WITH A 3-POILE BREAKER FOR BATTERY FEED REQUIRED, IN COMPLIANCE WITH ELECTRICAL CODE, AS FOLLOWS CLOCATED ON WALL ON LOCK JAMB SIDE OF MACHINE ROOM DOOR)

<u>LIGHTING-</u> DWNER/AGENT TO ENSURE AT LEAST 5 FTC OR 54 LUX AMBIENT LIGHTING OVER ELEVATOR AREA.

FASCIA PANEL BLOW UPPER LEVEL ENTRANCE— WHERE REQUIRED, FASCIA PANEL MUST BE FASTENED TO A SOLID WALL AND BE PERPENDICULAR TO THE FLOOR AND WALLS. HOISTWAY FASCIA IS NOT SELF-SUPPIRTING FOR LING, CONTINUOUS RUNS VOID OF ENTRANCES, ADEQUATE SUPPORT AND THE FASCIA MUST BE PROVIDED BY OTHERS.

ENTRANCE ASSEMBLIES— ENTRANCE ASSEMBLIES MUST BE ADJUSTED TO ALIGN WITH PLATFORM AND INTERLOCK EQUIPMENT. OTHERS TO ALLOV AN ADEQUATE ROUGH OPENING.

RETURN WALLS— RETURN WALLS AT ENTRANCES MUST BE BUILT-IN BY DITHERS AFTER ENTRANCE ASSEMBLIES ARE IN PLACE. ENTRANCE ASSEMBLY MUST BE SECURELY FASTENED TO WALLS BY ELEVATOR CONTRACTOR.

REV-000

LU/LA ORION MODEL 4854W